

ERSATZTEILKATALOG
(Motor)
Dinli DMX 350
(DL 801)



Art-Nr: 05093111-ETK

SEIKEL


SEIKEL GmbH

Düsseldorferstr. 10 - D-72072 Tübingen

Tel: (+49)7071-97558-0 - Fax: (+49)7071-97558-11


e-mail: verkauf@seikel24.de - Online: <http://www.seikel24.de>

CYLINDER HEAD COVER & CAMSHAFT

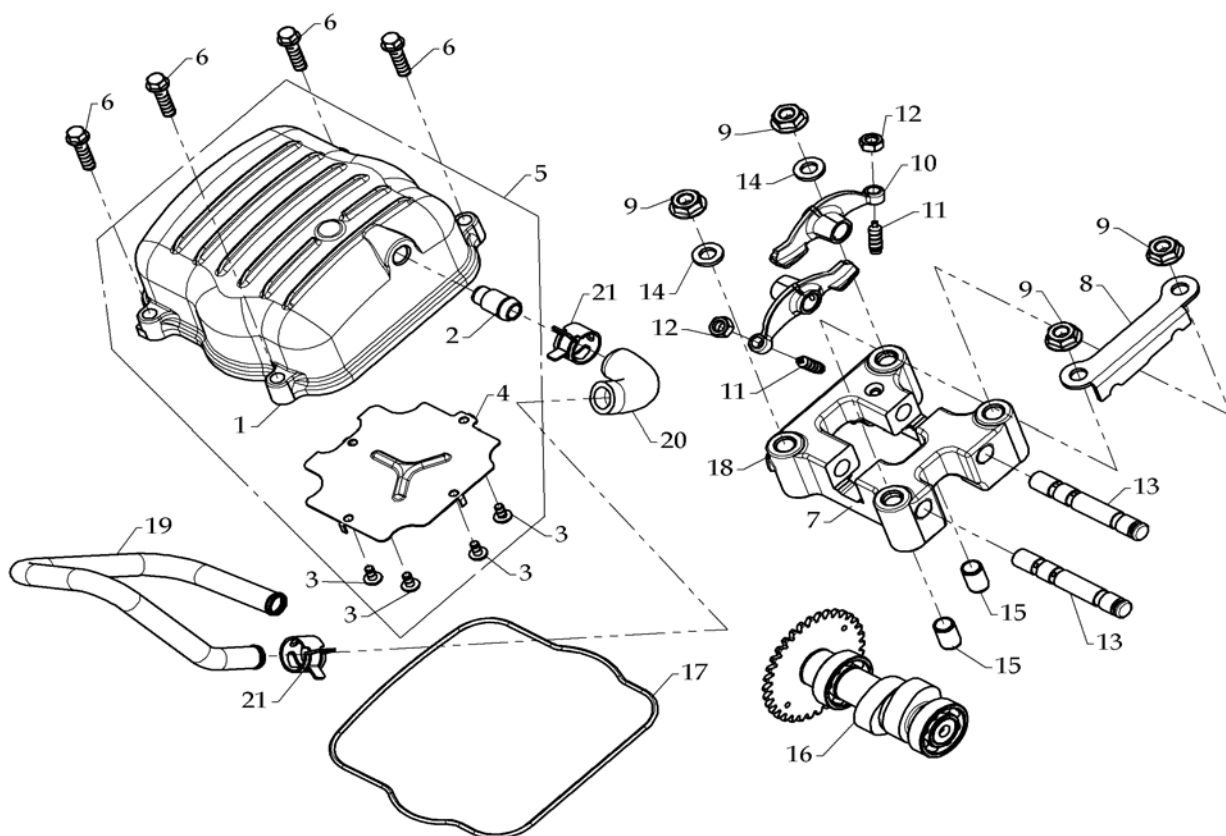


Ersatzteil	Teile-Nr.	Beschreibung	Spezifikation	Menge	Modell
01	E130008A49	CYLINDER HEAD COVER		1	
02		BREATHER TUBE CONNECT		1	
03		SCREW, PANHEAD	M4X0.5X8L	4	
04		PLATE		1	
05	E130120A00	CYLINDER HEAD COVER ASSY'		1	
06	A050121-41	BOLT, FLANGE	M6X1.0X25L	4	
07	E130011-01	CAMSHAFT HOLDER		1	
08	E130020-00	HOLDER, ROCKER ARM SHAFT		1	
09	A060013-41	NUT, FLANGE	M8X1.25	4	
10	E130019-00	VALVE ROCKER ARM		2	
11	E020061-00	SCREW, TAPPET ADJUSTING		2	
12	E020062-00	NUT, TAPPER ADJUSTING	M6X0.75	2	
13	E130021-00	SHAFT, ROCKER ARM		2	
14	A080025-41	WASHER	Ø 8.2X Ø 15X2t	2	
15	A070019-00	DOWEL PIN	Ø 8.2X Ø 10X16L	2	
16	E130010-00	CAMSHAFT COMP		1	
17	E130081-00	GASKET,CYLINDER HEAD COVER		1	
18		PLUG		1	
19	E130175-41	COOLING TUBE		1	
20	E130174-00	CONNECT TUBE		1	
21		TUBE CLIP	Ø 17X Ø 12X1.0t	2	

CYLINDER HEAD & VALVE

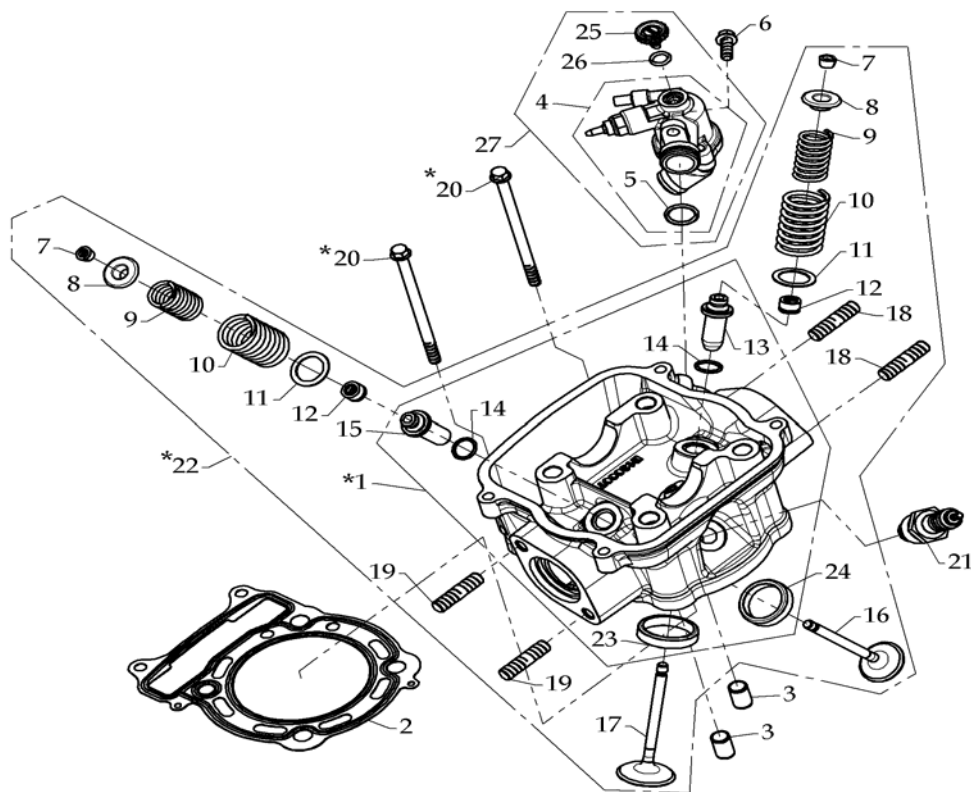


Ersatzteil	Teile-Nr.	Beschreibung	Spezifikation	Menge	Modell
01		CYLINDER HEAD COMP		1	270
*		CYLINDER HEAD COMP	300C.C.	1	300
02	E130085A00	GASKET, CYLINDER HEAD		1	
03	A070019-00	DOWEL PIN	Ø 8.2X Ø 10X16L	2	
04	E130097A00	CONTROL, COOLING		1	
05	A040005-00	O-RING	P14	1	
06	A050130-41	BOLT, FLANGE	M6X1.0X16L	1	
07	E130083-00	VALVE KEEPER		4	
08	E130058-00	RETAINER, VALVE SPRING		2	
09	A110033-00	INNER VALVE SPRING		2	
10	A110031-00	OUTER VALVE SPRING		2	
11	E020059-00	SEAT, VALVE SPRING		2	
12	A030025-01	SEAL, VALVE STEM	Ø 5.5	2	
13		GUIDE, IN. VALVE		1	
14		O-RING	S12X1.5,VITON	2	
15		GUIDE, EX. VALVE		1	
16	E130015-00	EXHAUST VALVE		1	
17	E130014-00	INTAKE VALVE		1	
18	A140014-41	STUD BOLT	M6X1.0X35L	2	
19	A140005-41	STUD BOLT	M8X1.25X32L	2	
20	A050127-41	BOLT, FLANGE	M6X1.0X100L	2	270
*	A050222-41	BOLT, FLANGE	M6X1.0X106L	2	300
21	A160002-00	SPARK PLUG	NGK,DPR7EA-9	1	
22	E130166-00	CYLINDER HEAD & VALVE ASSY"	270C.C.	1	270
*	E130184-00	CYLINDER HEAD & VALVE ASSY"	300C.C.	1	300
23		SEAT, INTAKE VALVE		1	
24		SEAT, EXHAUST VALVE		1	
25	A050227-00	BOLT, EXHAUST VALVE	M6X1.0	1	
26	A040039-00	O-RING	P8-7.8X1.9	1	
27	E130186-00	COOLING CONTROL ASSY'		1	

OIL MIST FILTER & CARBURETOR

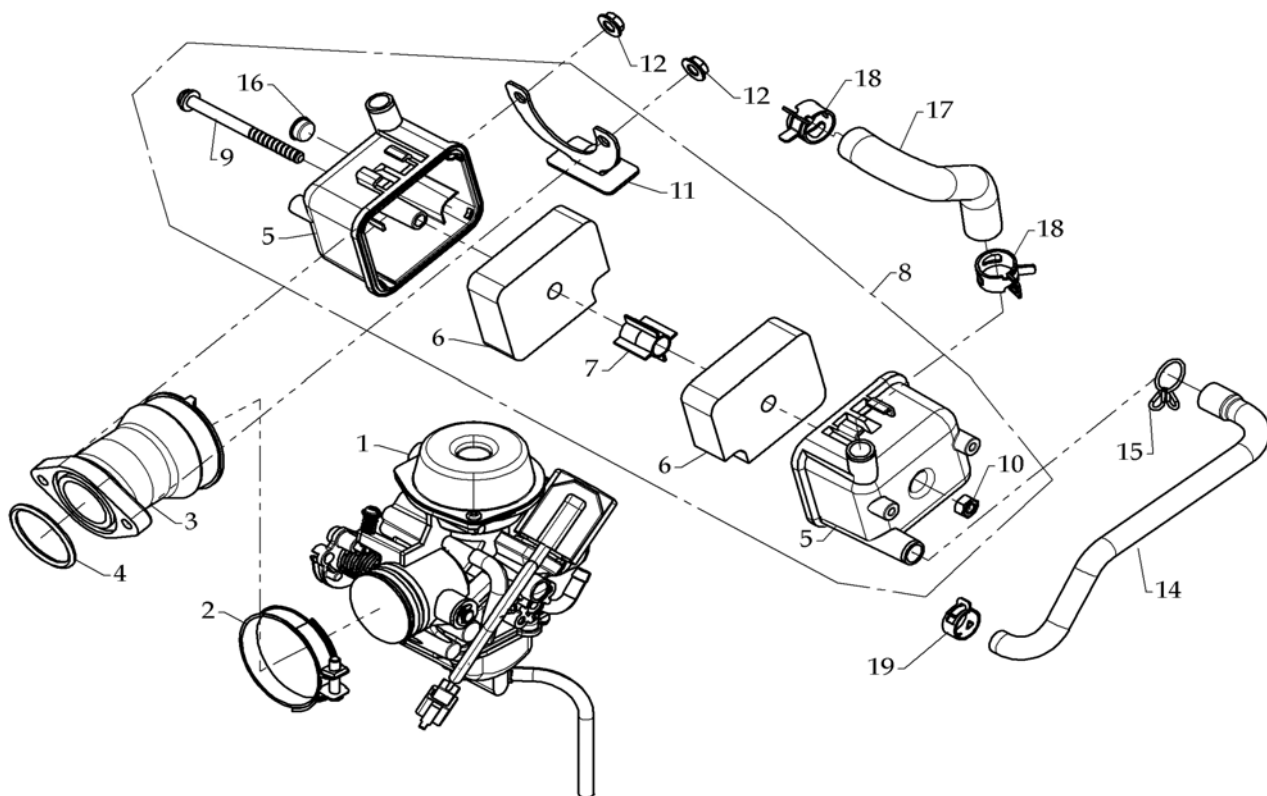


Ersatzteil	Teile-Nr.	Beschreibung	Spezifikation	Menge	Modell
01	E130016-00	CARBURETOR	WVF-13	1	
02	E020134-00	BAND,INTAKE DUCT	Ø 50	1	
03	E130079-00	CONNECTOR,CARBURETOR		1	
04	A040035-00	O-RING	Ø 3X Ø 33.5	1	
05	E130147-00	OIL MIST FILTER		2	
06	E130151-00	CORE,OIL MIST FILTER		2	
07	E130150-00	SOLID BUSH		1	
08	E130156A00	OIL MIST FILTER ASSY'		1	
09	A050221-41	PANHEAD BOLT	M6X1.0X75L	1	
10	A060001-41	HEAX NUT	M6X1.0X6H	1	
11	E130148-50	BRACKET,OIL MIST FILTER		1	
12	A060009-41	FLANGE HEAX NUT	M6X1.0	2	
13	E130163-00	DRAIN PLUG TUBE ASSY'		1	
14	E130152-00	TUBE DRAIN PLUG		1	
15	A220018-00	TUBE CLIP	Ø 14X Ø 1.7	1	
16	A220023-00	PLUG	Ø 10	1	
17	E130154-00	CRANKCASE BREATHER TUBE		1	
18	A220020-41	TUBE CLIP	Ø 17X12X1.0t	3	
19	E130054-41	CLIP,TUBE	Ø 14	1	

CYLINDER

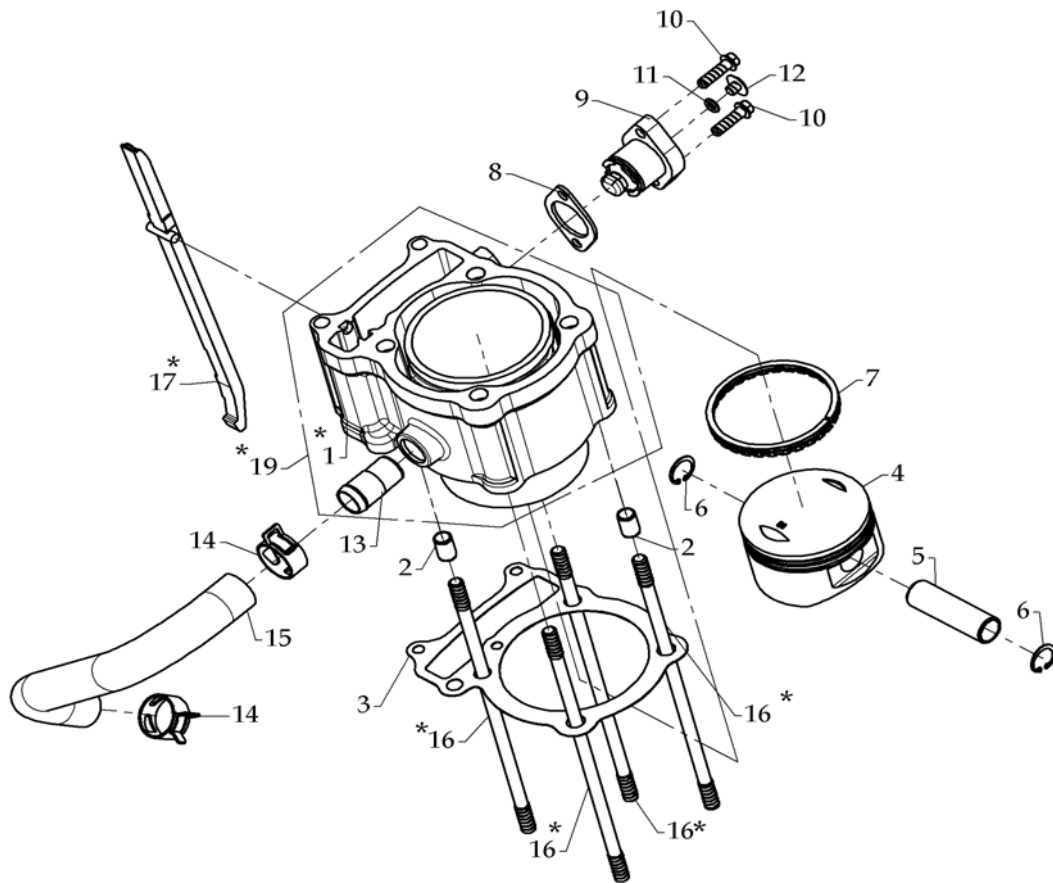


Ersatzteil	Teile-Nr.	Beschreibung	Spezifikation	Menge	Modell
01	E130006A49	CYLINDER COMP		1	270
*	E130162A49	CYLINDER COMP		1	300
02	A070019-00	DOWEL PIN	Ø 8.2X Ø 10X16L	2	
03	E130086-00	GASKET, CYLINDER		1	
04	E130012B00	PISTON (STD.)		1	
05	E130013-00	PISTON PIN		1	
06	E130042-00	INTERNAL CIRCLIP		2	
07	E130041-00	RING SET PISTON (STD.)		1	
08	E020066-00	GASKET, TENSIONER LIFTER		1	
09	E020065-00	CAM CHAIN TENSIONER		1	
10	A050131-41	BOLT, FLANGE	M6X1.0X22L	2	
11	A040015-00	O-RING	Ø 9.5X Ø 1.5	1	
12	A050148-41	SCREW, PAN HEAD	M6X1.0X6L	1	
13		CONNECTOR,TUBE	Ø 19	1	
14	F150127-41	TUBE CLIP		2	
15	E130101-00	PIPE,COOLING		1	
16	A140011-41	STUD BOLT	M8X1.25X219L	4	270
*	A140013-41	STUD BOLT	M8X1.25X225L	4	300
17	E130048-00	GUIDE COMP, CAM CHAIN		1	270
*	E130160-00	GUIDE COMP, CAM CHAIN		1	300
18		SUIT,CYLINDER COMP		1	270
*		SUIT,CYLINDER COMP		1	300
19	E130177A00	CYLINDER COMP		1	270
*	E130178A00	CYLINDER COMP		1	300

CRANKSHAFT

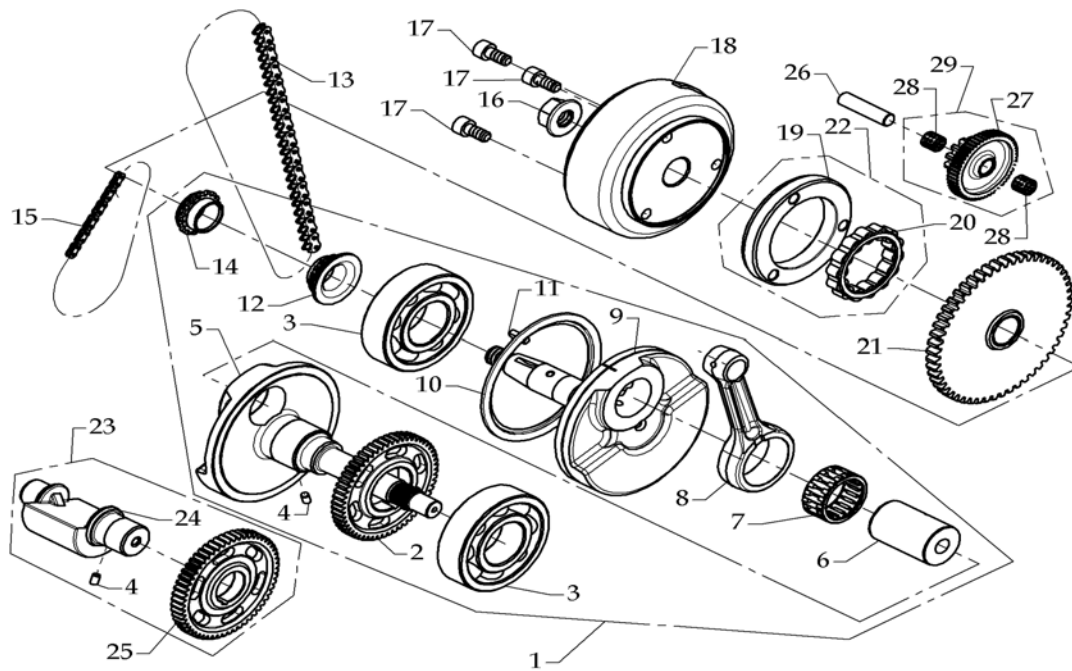


Ersatzteil	Teile-Nr.	Beschreibung	Spezifikation	Menge	Modell
01	E130009-00	CRANKSHAFT COMP		1	270
*	E130159A00	CRANKSHAFT COMP		1	300
02		GEAR,CRANKSHAFT	56T	1	
03		BEARING,RADIAL BALL	TMB307CS19-1	2	
04		PIN	Ø 5X8L	2	
05		LEFT CRANKSHAFT		1	270
*		LEFT CRANKSHAFT		1	300
06		PIN,PULL ROD		1	
07		BEARING , NEEDLE ROLLER	35X40X18	1	
08		PISTON,PULL ROD		1	270
*		PISTON,PULL ROD		1	300
09		RIGHT CRANKSHAFT		1	270
*		RIGHT CRANKSHAFT		1	300
10		COVER,PRESERVE OIL		1	
11		KEY WOODRUFF	Ø 25X4.0t	1	
12		TIMING GEAR	17T	1	
13	E130050-00	CHAIN, CAM	98 LINKS	1	270
*	E130164-00	CHAIN, CAM	63.5X100P	1	300
14		DRIVEN SPROCKET OIL PUMP	16T	1	
15	E130051-00	CHAIN,OIL PUMP	46 LINKS	1	
16	A060056-41	NUT, FLANGE	M14X1.25	1	
17	A050209-41	BOLT, SOCKET	M8X1.0X17L	3	
18	E130017-01	FLYWHEEL COMP		1	
19		OUTER,START CLUTCH		1	
20		START CLUTCH	Ø 56.294	1	
21	E130145A00	GEAR, STARTER CLUTCH	Ø 39.627	1	
22	E130146-00	START CLUTCH ASSY'	Ø 39.627X Ø 56.294	1	
23	E130049-00	BALANCESHAFT COMP		1	

CRANKSHAFT

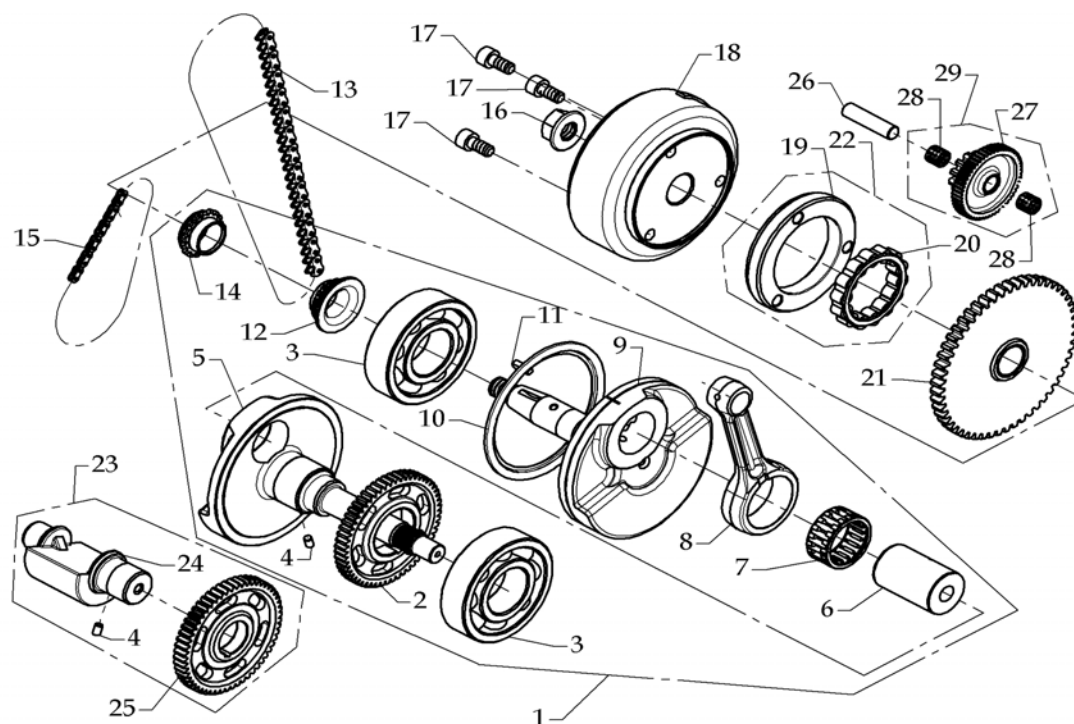


Ersatzteil	Teile-Nr.	Beschreibung	Spezifikation	Menge	Modell
24		SHAFT,BALANCE		1	
25		GEAR,BALANCE	56T	1	
26	A070033-00	SHAFT,REDUCTION GEAR		1	
27	E130045-00	GEAR, STARTER REDUCTION		1	
28	A020004-00	BUSH,BAERING		2	
29	E130059-00	GEAR, STARTER REDUCTION		1	

RIGHT CRANKCASE

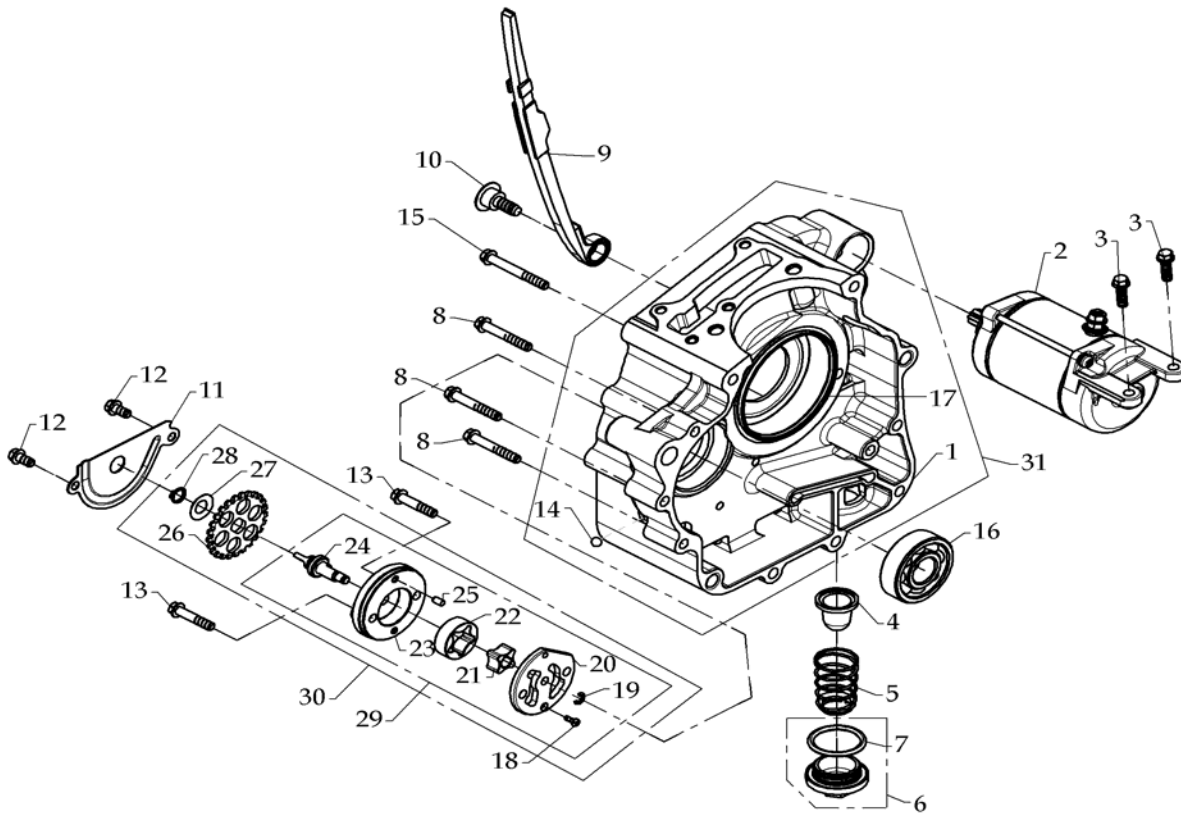


Ersatzteil	Teile-Nr.	Beschreibung	Spezifikation	Menge	Modell
01	E130002B49	CRANKCASE R.		1	
02	E130018-00	STARTER MOTOR ASSY'		1	
03	A050120-41	BOLT, FLANGE	M6X1.0X20L	2	
04	E020072-00	SCREEN, OIL FILTER		1	
05	E020073-00	SPRING, OIL FILTER SCREEN		1	
06	E020071-00	CAP, OIL FILTER		1	
07	A040021-00	O-RING	S31, ϕ 30.7X3.5	1	
08	A050069-41	BOLT, FLANGE	M6X1.0X40L	3	
09	E130047-00	CHAIN TENSIONER GUDE		1	
10	E130093-00	PIVOT, CAM CHAIN TENSIONER		1	
11	E130092-41	OIL SEPARATOR		1	
12	A050129-41	BOLT, FLANGE	M6X1.0X12L	2	
13	A050122-41	BOLT, FLANGE	M6X1.0X30L	2	
14	A150004-00	STEEL BALL	ϕ 6.5	1	
15	A050070-41	BOLT, FLANGE	M6X1.0X50L	1	
16	A010050-00	BEARING, RADIAL BALL	6304, ϕ 52X ϕ 20X15t	1	
17		BUSH,CRANKSHAFT R.		1	
18		SCREW, PAN HEAD	M3X0.5X8L	1	
19		E TYPE CIRCLIP	ϕ 4	1	
20		COVER,OIL PUMP		1	
21		INTERNAL ROTOR		1	
22		EXTERNAT ROTOR		1	
23		BUDY,OIL PUMP		1	
24		SHAFT,OIL PUMP		1	
25		PIN	ϕ 4X8L	1	
26	E130071-00	SPROCKET, OIL PUMP DRIVEN	25T	1	
27	A080099-00	SPRING WASHER	ϕ 10.2X ϕ 20X0.3t	1	
28	A100015-43	CIRCLIP,C TYPE	ϕ 10	1	

RIGHT CRANKCASE

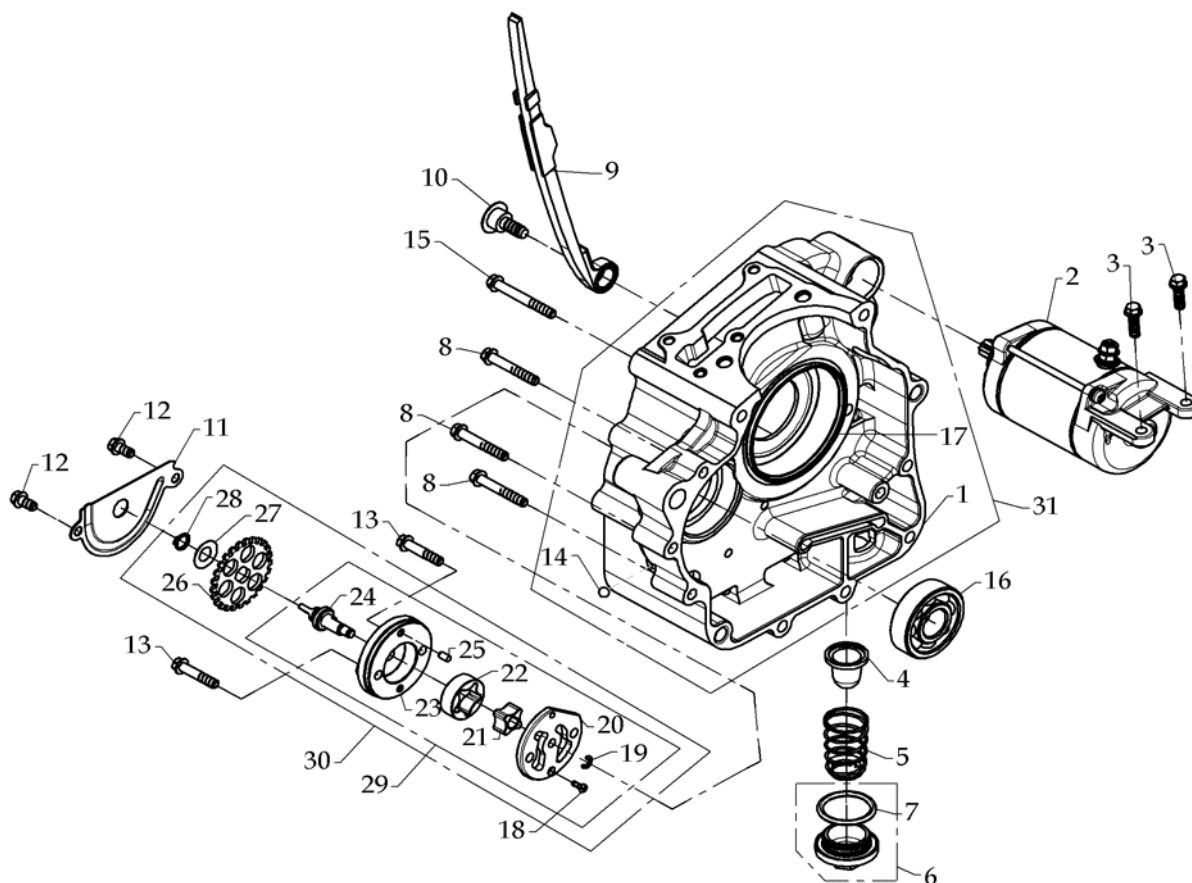


Ersatzteil	Teile-Nr.	Beschreibung	Spezifikation	Menge	Modell
29	E130103-00	OIL PUMP ASSY		1	
30	E130135-00	OIL PUMP ASSY' & SPROCKET		1	
31	E130179-00	CRANKCASE R. ASSY'		1	

CRANKCASE

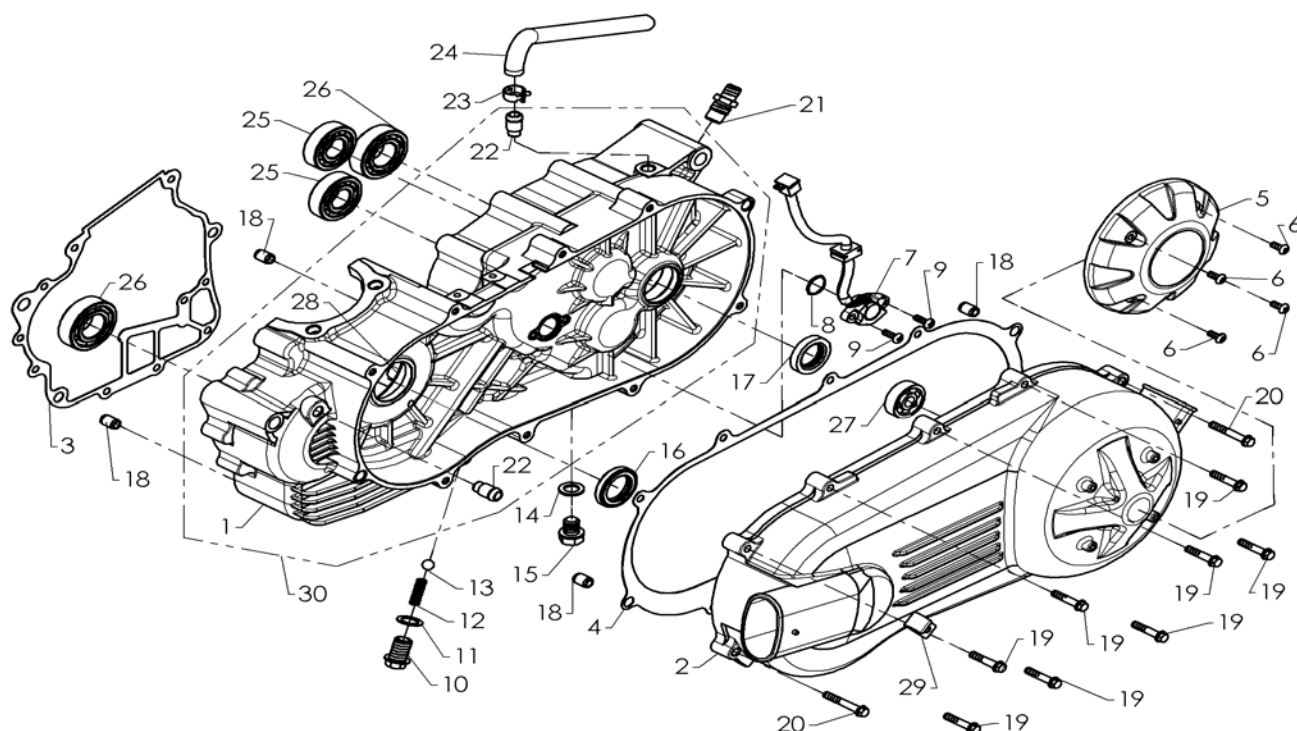


Item	Part no	Description	Specification	Menge	Model
01	E130001A49	CRANKCASE L.		1	
02	E130003-49	COVER, L.		1	
03	E130170-00	GASKET, R. COVER		1	
04	E130090-00	GASKET, L. COVER		1	
05	E130023-01	DECORATION COVER		1	
06	A050181-41	SCREW, PAN HEAD	M5X0.8X12L	4	
07	E020179-00	INDICATOR,GEAR SHIFT		1	
08	A040012-00	O-RING	P21, ϕ 20.8X2.4	1	
09	A050035-41	SCREW, PAN HEAD	M5X14L	2	
10	E060021-42	BOLT, SHIFT LOCK		1	
11	A080089-00	WASHER DRAIN PLUG	ϕ 14.2X ϕ 21X1.0t	1	
12	A110001-41	SPRING,COMPRESSION	ϕ 8X25L	1	
13	A150001-00	BALL,BEARING	ϕ 9.525	1	
14	A080052-00	WASHER DRAIN PLUG	ϕ 12.2X ϕ 20X2t	1	
15	A050071-41	BOLT,DRAIN PLUG	M12X1.25	1	
16	A030028-00	OIL SEAL	TC27X42X7t	1	
17	A030024-00	OIL SEAL	TC25X38X7	1	
18	A070009-00	DOWEL PIN	ϕ 6.4X ϕ 10X14L	4	
19	A050122-41	BOLT, FLANGE	M6X1.0X30L	8	
20	A050069-41	BOLT, FLANGE	M6X1.0X40L	2	
21	E060035-00	SPEEDOMETER CONNECTOR		1	
22		CONNECT,BREATHER HOSE	ϕ 13	2	
23	E130054-41	CLIP,TUBE	ϕ 14	1	
24	E130066-00	BREATHER HOSE	ϕ 10X ϕ 14.5	1	

CRANKCASE

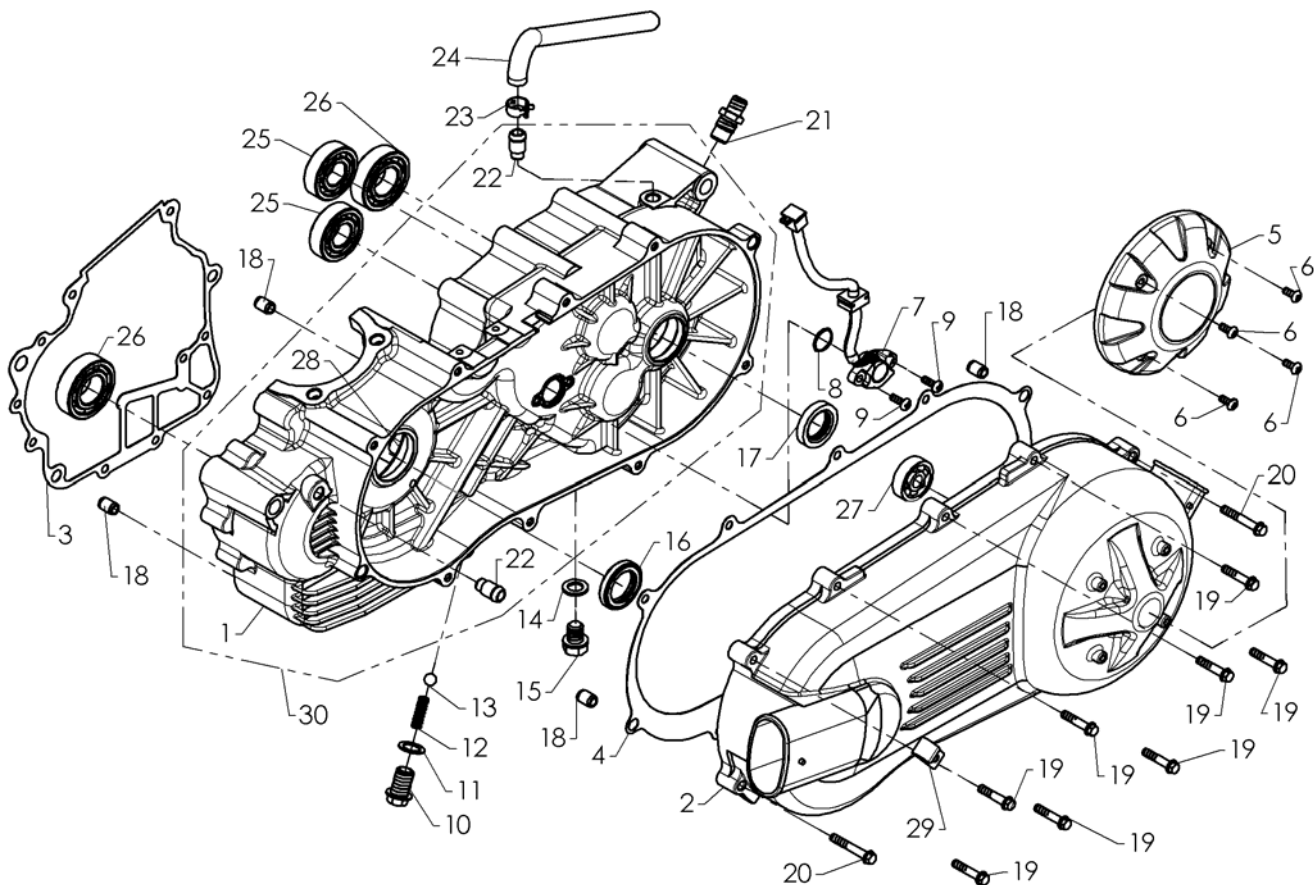


Ersatzteil	Teile-Nr.	Beschreibung	Spezifikation	Menge	Modell
25	A010011-00	BEARING, RADIAL BALL	6204, ϕ 20X ϕ 47X14t	2	
26	A010045-00	BEARING, RADIAL BALL	6205, ϕ 25X ϕ 52X15t	2	
27	A010020-04	BEARING, RADIAL BALL	6300LLU, ϕ 10X ϕ 35X11t	1	
28		BUSH, CRANKSHAFT		1	
29	A220022-00	CLIP, TUBE	ϕ 10	1	
30	E130180-00	CRANKCASE L. ASSY'		1	

RIGHT CRANKCASE COVER

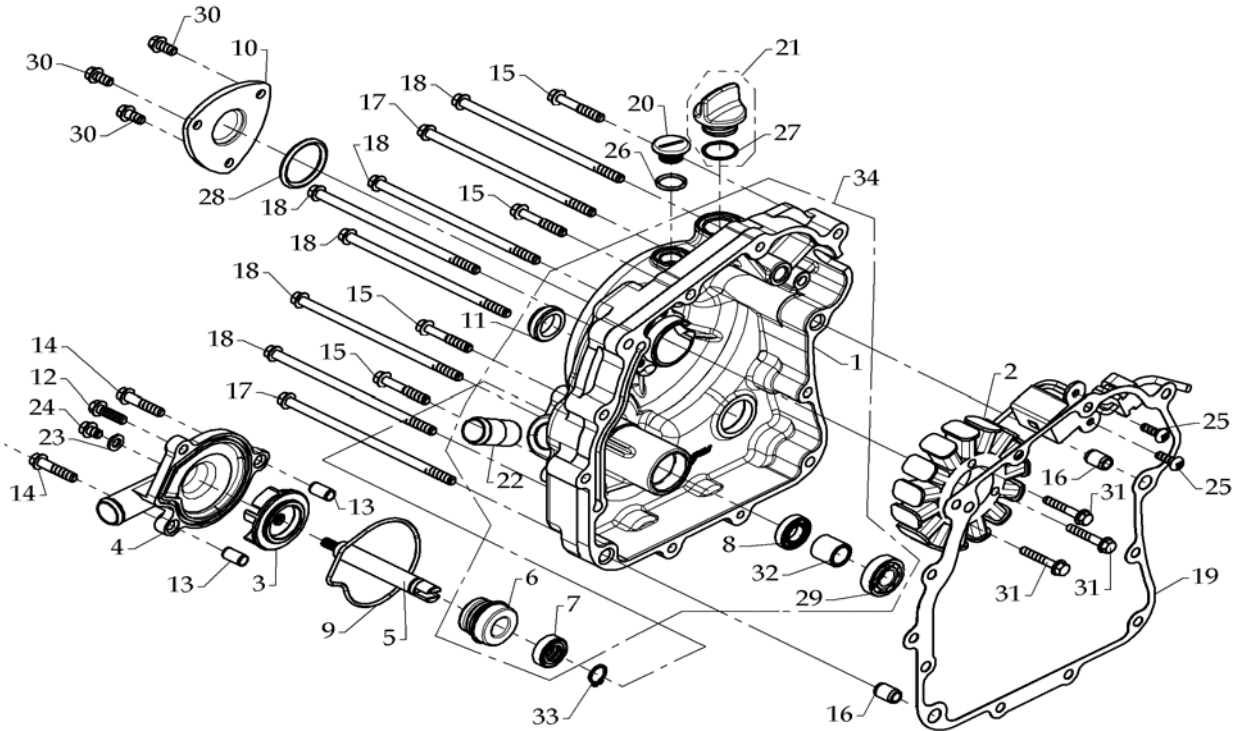


Ersatzteil	Teile-Nr.	Beschreibung	Spezifikation	Menge	Modell
01	E130004-49	COVER, R. CRANKCASE COMP		1	
02	E130017-02	STATOR COMP		1	
03	E130073-00	IMPELLER		1	
04	E130068-49	COVER,VANE PUMP		1	
05	E130074-00	SHAFT,VANE PUMP		1	
06	A030032-00	MACHINERY OIL SEAL	EH790	1	
07	A030027-00	OIL SEAL	TC12	1	
08	A010008-00	BEARING, RADIAL BALL	6901, ϕ 12x ϕ 24x6t	1	
09	E130084-00	SEAL,VANE PUMP		1	
10	E130005-49	DECORATION COVER		1	
11	E130052-00	OIL LEVEL SCREEN	ϕ 25	1	
12	A050120-41	BOLT, FLANGE	M6X1.0X20L	1	
13	A070018-00	DOWEL PIN	ϕ 8X14L	2	
14	A050138-41	BOLT, FLANGE	M6X1.0X28L	2	
15	A050139-41	BOLT, FLANGE	M6X1.0X35L	4	
16	A070009-00	DOWEL PIN	ϕ 6.4X ϕ 10X14L	2	
17	A050178-41	BOLT, FLANGE	M6X1.0X135L	2	
18	A050177-41	BOLT, FLANGE	M6X1.0X130L	6	
19	E130088-00	GASKET, R. CRANKCASE COVER		1	
20	E130104-00	TIMING SCREEN COVER		1	
21	E130039-00	OIL FILL CAP	M20X2.5	1	
22		CONNECTOR,TUBE	ϕ 19	1	
23	A080074-00	WASHER DRAIN PLUG	ϕ 6.5	1	
24	A050080-41	BOLT, FLANGE	M6X1.0X8L	1	
25	A050035-41	SCREW, PAN HEAD	M5X14L	2	
26	A040005-00	O-RING	P14	1	
27	A040012-00	O-RING	P21, ϕ 20.8X2.4	1	
28	A040026-00	O-RING	P30	1	

RIGHT CRANKCASE COVER

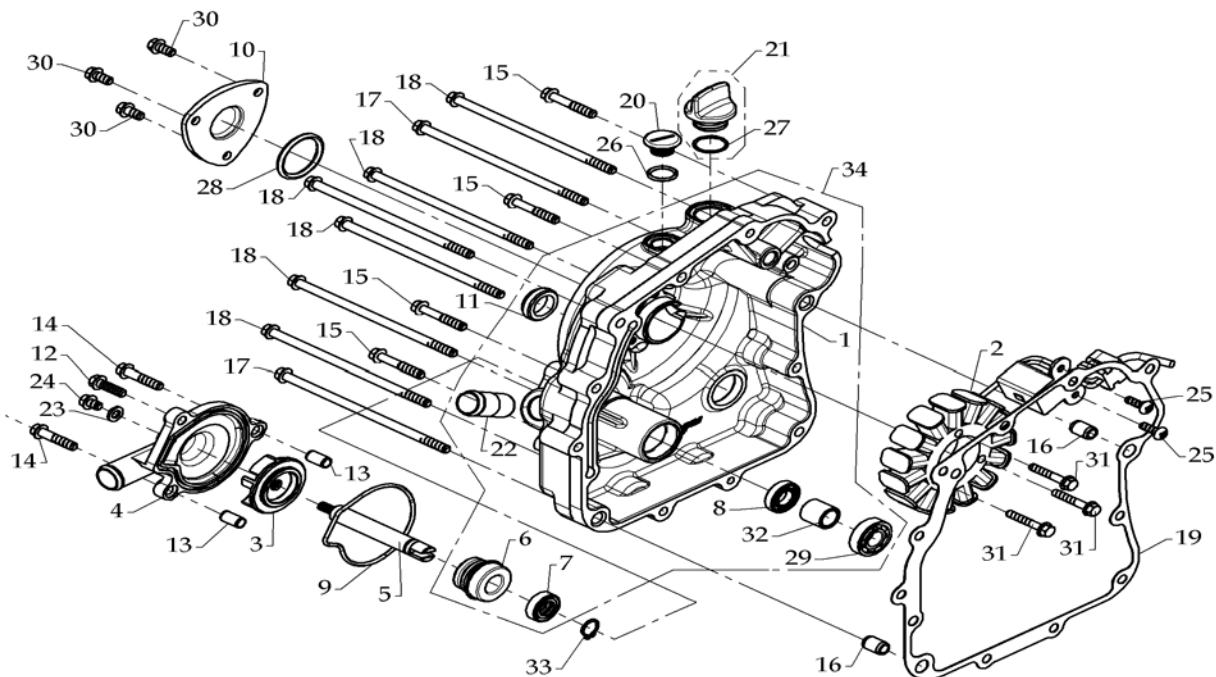


Ersatzteil	Teile-Nr.	Beschreibung	Spezifikation	Menge	Modell
29	A010033-00	BEARING, RADIAL BALL	6001, ϕ 12X ϕ 28X8t	1	
30	A050129-41	BOLT, FLANGE	M6X1.0X12L	3	
31	A050193-41	BOLT, FLANGE	M5X0.8X30L	3	
32	A090022-00	COLLAR		1	
33	A100023-43	RETAINING RINGS C TYPE	ϕ 12	1	
34	E130182-00	R. CRANKCASE COVER ASSY'		1	

GEAR BOX COVER

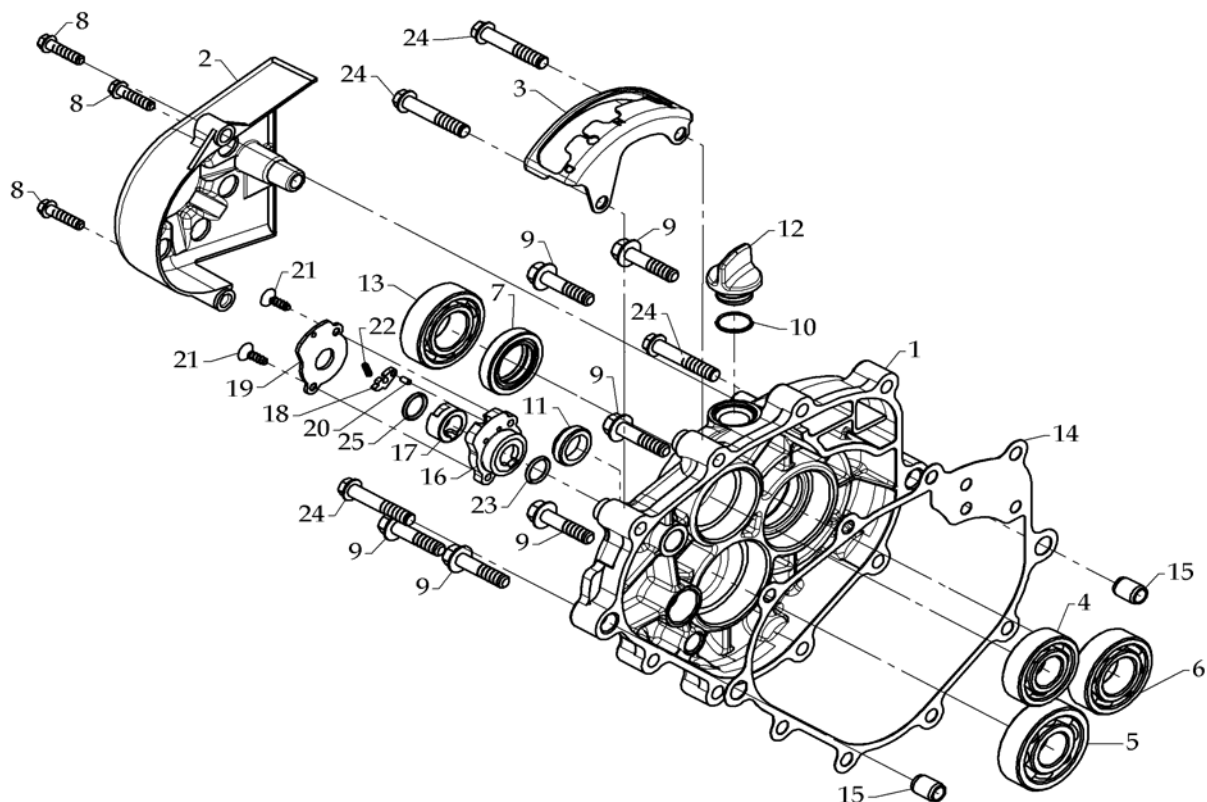


Ersatzteil	Teile-Nr.	Beschreibung	Spezifikation	Menge	Modell
01	E130022-00	COVER, GEAR		1	
02	E130056-00	SPROCKET COVER		1	
03	E130055C45	INDICATOR , GEAR SHIFT		1	
04	A010011-00	BEARING, RADIAL BALL	6204, ϕ 20X ϕ 47X14t	1	
05	A010046-00	BEARING, RADIAL BALL	63/22, ϕ 22X ϕ 56X16t	1	
06	A010045-00	BEARING, RADIAL BALL	6205, ϕ 25X ϕ 52X15t	1	
07	A030013-00	OIL SEAL	TC25X42X8	1	
08	A050121-41	BOLT, FLANGE	M6X1.0X25L	3	
09	A050179-41	BOLT, FLANGE	M8X1.25X35L	6	
10	A040012-00	O-RING	P21, ϕ 20.8X2.4	1	
11	E130052-00	OIL LEVEL SCREEN	ϕ 25	1	
12	E130039-00	OIL FILL CAP	M20X2.5	1	
13	A010045-04	BEARING, RADIAL BALL	6205LLU, ϕ 25X ϕ 52X15t	1	
14	E130040-00	GASKET, GEAR COVER		1	
15	A070008-00	DOWEL PIN	ϕ 12X16L	2	
16	E130060-00	REVERS SWITCH DEVICE		1	
17	E130061-00	RATCH		1	
18	E130062-00	STOPPER		1	
19	E130063-00	COVER		1	
20	A070030-00	PIN	ϕ 3X6L	1	
21	A050175-41	MACHINE SCREW	M4X12L	2	
22	A110032-41	SPRING, COMPRESSION	ϕ 3X ϕ 0.35X10L	1	
23	A040005-00	O-RING	P14	1	
24	A050210-41	BOLT, FLANGE	M8X1.25X45L	4	
25	A040024-00	O-RING	S14	1	

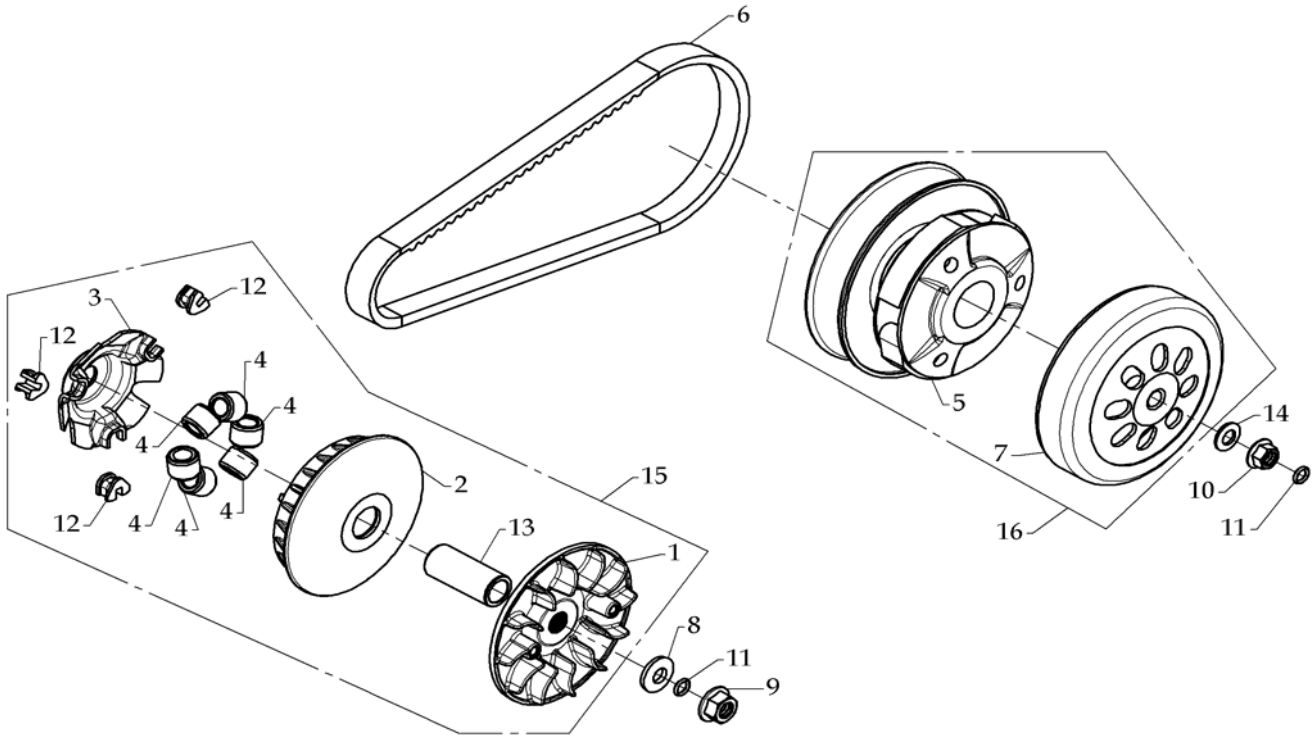


Ersatzteil	Teile-Nr.	Beschreibung	Spezifikation	Menge	Modell
01	E130115-00	FACE, FIXED DRIVE		1	
02	E130116-00	FACE,MOVABLE DRIVE		1	
03	E130112-00	RAMP PLATE		1	
04	E130114-00	ROLLER SET, WEIGHT	20g	6	
05	E130117-00	MOVABLE DRIVEN FACE COMP		1	
06	A170010-00	DRIVE BELT	893 24 30	1	
07	E130118-00	OUTER,CLUTCH		1	
08	A080094-00	WASHER,CONICAL SPRING	φ 17X φ 30X3.5t	1	
09	A060056-41	NUT, FLANGE	M14X1.25X13.5t	1	
10	A060038-41	NUT, FLANGE	M12X1.25	1	
11	A040028-00	O-RING	φ 2.4X φ 9.8	2	
12	E130113-00	SLIDE PIECE		3	
13	A090021-00	DRIVE FACE BOSS		1	
14	A080079-00	WASHER,CONICAL SPRING	φ 12.2X φ 24X2.6t	1	
15	E130110-00	PRIMARY SLIDING SHEAVE COMP.		1	
16	E130111-00	SECONDARY SLIDING SHEAVE COMP.		1	

TRANSMISSION

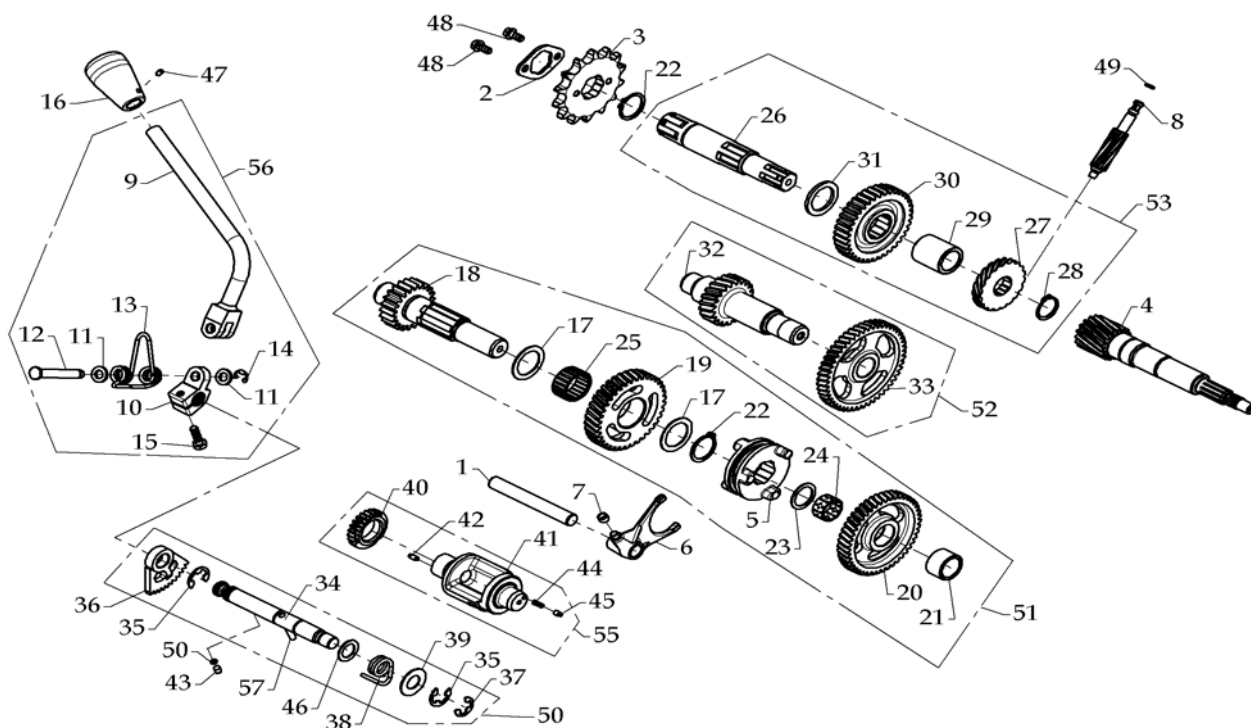

Ersatzteil	Teile-Nr.	Beschreibung	Spezifikation	Menge	Modell
01	E060006-00	FORK SHAFT		1	
02	A170006-00	HOLDER, SPROCKET DRIVE		1	
03	A170004-00	SPROCKET, DRIVE	14T	1	
04	E130033-00	SHAFT, PRIMARY DRIVE	17T	1	
05	E130026-00	CLUTCH GEAR R.D.		1	
06	E120009-00	FORK		1	
07	E130096-00	FORK RING		1	
08	E060070-00	SPEEDOMETER SHAFT	11T	1	
09		LEVER , GEAR SHIFT		1	
10		CONNECTER , GEAR SHIFT		1	
11		SPACER	φ 8.2X φ 15X2t	2	
12		SHAFT		1	
13		SPRING , GEAR SHIFT		1	
14		RETAINING RINGS E TYPE	φ 7	1	
15	A050051-41	HEX BOLT	M6X1.0X25L	1	
16	E060028-00	CONICAL KNOBS		1	
17	A090013-00	WASHER , PLATE	φ 25.2X φ 35X1t	2	
18	E130028-00	COUNTER SHAFT	22T	1	
19	E130027-00	REVERSE GEAR,COUNTER SHAFT	37T	1	
20	E130032-00	GEAR,COUNTER SHAFT	45T	1	
21	A090017-00	COLLAR	φ 20.2X φ 26X16L	1	
22	A100013-43	RETAINING RINGS C TYPE	φ 25	3	
23	A080004-00	WASHER , PLATE	φ 20.2X φ 27X1t	1	
24		BEARING,COLLAR	φ 20X φ 23X12L	1	
25	A010044-00	BEARING , NEEDLE ROLLER	K25X30X17H	1	
26	E130035-00	SHAFT,OUTPUT		1	
27	E060069-00	GEAR, SPEEDOMETER DRIVE	18T	1	
28	A100010-00	RETAINING RINGS C TYPE	φ 20	1	

TRANSMISSION

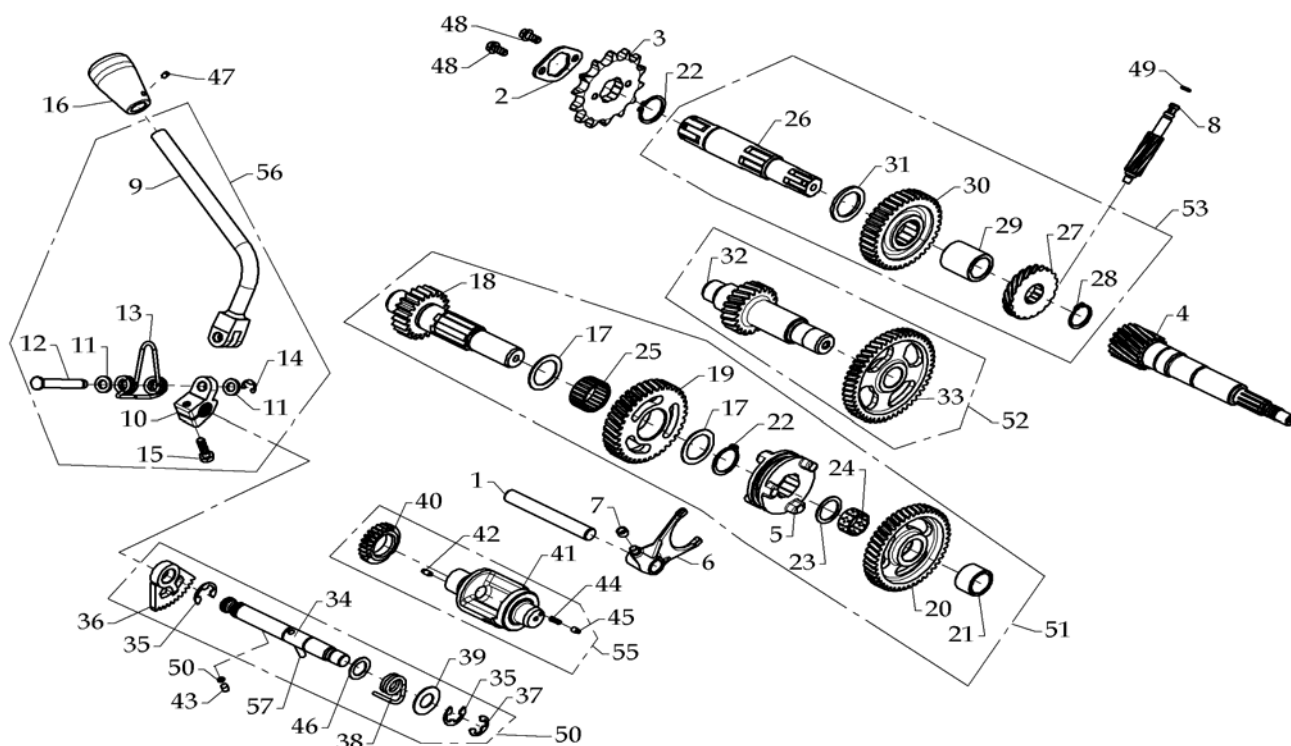

Ersatzteil	Teile-Nr.	Beschreibung	Spezifikation	Menge	Modell
29	A090008-00	COLLAR	Ø 20.2X Ø 28X30.7L	1	
30	E130036-00	FINAL GEAR	37T	1	
31	A090015-00	SPACER	Ø 25.2X Ø 35X2.5t	1	
32		REVERS SHAFT	21T	1	
33		GEAR,REVERSE 1ND	49T	1	
34		SHAFT, GEARSHIFT		1	
35		RETAINING RINGS E TYPE	Ø 12	2	
36		GEAR, GEARSHIFT		1	
37		RETAINING RINGS E TYPE	Ø 10	1	
38		SPRING , GEAR SHIFT		1	
39		WASHER , PLATE	Ø 14X Ø 28X1.0t	1	
40		GEAR , CAMSHAFT		1	
41		CAMSHAFT	D.N.R	1	
42		PIN	Ø 6	1	
43	A070036-00	PIN	Ø 5X7L	1	
44	A110002-00	SPRING,COMPRESSION	WF04-10	1	
45	E060023-00	SWITCH,INDICATOR		1	
46		WASHER , PLATE	Ø 14.2X Ø 22X1.0t	1	
47	A050072-41	SCREW , HEXAGON SOCKET	M4X5L	1	
48	A050129-41	BOLT, FLANGE	M6X1.0X12L	2	
49	A040011-00	O-RING	P6, Ø 6X Ø 1.9	1	
50	E130034-00	GEARSHTFT SHAFT ASSY'		1	
51	E130089-00	COUNTERSHAFT ASSY'		1	
52	E130029-00	REVERSE SHAFT ASSY'		1	
53	E130053-00	MAIN SHAFT ASSY'		1	
54	A040032-00	O-RING	S3, Ø 2.5X Ø 1.5X Ø 5.5	1	
55	E130109-00	CAMSHIFT ASSY'		1	
56	E130122A00	GEARSHIFT LEVER ASSY'		1	
57		PIN	Ø 5X35L	1	